

Changing your Switch Caster location to enable easy switching – Switch Classic models

The RollerSurfer Switch Classic models contain extra positioning options for the Switch Caster location. When using the switching feature, it is recommended to place the two casters in equal distance from the main torsion bar.

Relocating the RollerSurfer Switch Caster is simple. Just take care not to lose a screw in the process.

1. With the small Allen key remove the four caster screws. (Turning COUNTER-CLOCKWISE.)
2. Leave the rubber pad in position.
3. Take out the screws. Be careful not to misplace any screw!
4. Take the Switch Caster and rubber pad on the front deck and move it a “hole-down”.
5. Take the Switch Caster and rubber pad on the back deck and move it a “hole-down”.
6. Make sure both Switch Casters are now in an equal distance from the main torsion bar.
7. Replace the four caster screws with the Allen key. (This time turning CLOCKWISE.)

